

MACHINE DISHWASHING GUIDE

SCRAPE DISHES into the bin to remove all food residue, especially greasy waste such as cheese.

For dishes that are stained, such as coffee cups, soak in **888 DEESTAIN POWDER** and warm water.

STACK CUTLERY loosely and place unsorted with handles facing down into a cutlery rack.

Do not sort cutlery or stack with handles facing up as this may result in poor washing performance or food residue sticking to the cutlery.

STACK BOWLS, CUPS, GLASSES AND JUGS upside down and not overlapping.

Be very careful when placing large, awkward items so they do not fall while washing or removing.

SORT PLATES AND DISHES into groups of like sized items. Place plates on their edge and at an angle.

Do not overlap crockery as this may result in poor washing performance with jet water missing part of the plate or dish.

WASHING PROCEDURE

Using an overhead pressure sprayer remove any remaining food residue before placing the rack into the dishwasher.

Pre-rinsing will assist in keeping the dishwasher clean, operating efficiently and reducing chemical usage.

WASHING CHECK LIST

Make sure that **888 RESULT** and **WINNER** are connected to the dishwasher, that drums are not empty and that the correct water temperatures are achieved as follows for each cycle;

Wash Cycle : 55 - 65°C

Rinse Cycle: 82 - 90°C

To polish cutlery after washing place cutlery face down in a bucket of prepared mix using 1 part 888 Methylated Spirit with 10 parts water, and polish each piece of cutlery with a clean cloth before putting away.

MAINTENANCE

EVERY DAY - Once each service is completed remove scrap trays, drain machine and clean reserve tank making sure that all foreign matter is removed. Wash down interior of machine thoroughly using hot water and checking that all jets are not blocked. Leave machine doors open to allow the dishwasher to air dry.

FORTNIGHTLY/MONTHLY - Make sure machine is kept in good working order and that all jets, wash arms, pumps and overflow values are working correctly. Check to make sure that detergent feed is not blocked and that probes are free of scale.

DISHWASHER DE SCALING GUIDE

It is recommended that you periodically check the Dishwasher for scale, usually every 1 to 3 months. If scale is found Dishwasher must be emptied and cleaned in the following manner.

1. Remove drain plug and allow all water to drain.
2. Carefully inspect inside machine for food scraps, loose cutlery or broken glass, remove and discard.
3. Turn off detergent dispenser (**Toggle switch on left side or underneath of dispenser**), insert drain plug and fill machine with water.
4. Add 1 litre of **888 AS NEW** to Upright Dishwasher or 2 litres of **888 AS NEW** to Conveyer Dishwasher and turn machine control to manual wash. Close doors and allow machine to wash for 15 minutes. If machine does not have manual wash, run 7 x 120 second cycles.
5. Turn machine off and remove drain plug. Flush inside of machine by leaving drain plug out turning onto fill for 5 minutes.
6. Manually scrub wash inlet stainers, drain plug and stainer baskets if necessary.
7. Reassemble machine, turn detergent dispenser on (**Toggle switch on left side or underneath of dispenser**) and fill machine ready for regular operation.